



Part List

No.	Part Description	Qty	No.	Part Description	Qty
1	Material Push Stick	1	30	Principal Axis	1
2	Feed Hopper	1	31	Flat Key 8x7x25	1
3	Feed Bottom Seat	1	32	Bearing Cover	1
4	Bolt Seat	4	33	Big Belt Pulley	1
5	Inner Hex Bolt M10x30	4	34	Flat Washer Ø10xØ32x2	2
6	Inner Hex Bolt(Left Rotation) M10x30	1	35	Outer Hex Screw M10x25	1
7	Flat Washer 10	4	36	Belt Cover	1
8	Left Baffle	1	37	Frame	1
9	Spring Washer 10	7	38	Uncork Pin Ø3x30	2
10	Feed Lead Clamp	1	39	Washer Ø13.5xØ37x3	2
11	Inner Hex Deep Head Bolt M8x20	4	40	Wheel	2
12	Blade	2	41	Locknut M6	6
13	Blade Rest	1	42	Outer Hex Bolt 3/8	1
14	Metal Locknut M8	8	43	Strap	1
15	Blade Rest Fixing Seat	1	44	Small Belt Pulley	1
16	Inner Hex Deep Head Bolt M8x20	4	45	Axis Sleeve	1
17	Bearing Seat	1	46	Flat Key 4.78x5x25	1
18	Bearing 6205	2	47	Right Baffle	1
19	Engine Soleplate Subassembly	1	48	Hex Flange Bolt M6x40	4
20	Front Cover Board	1	49	Cross Deep Head Bolt M6x40	2
21	Hex Flange Bolt M6x16	14	50	Engine	1
22	Spring Washer 6	6	51	Screw M8x40	3
23	Flat Washer 6	10	52	Unilateralism Screw M6x20	4
24	Hex Flange Nut M6	17	53	Hex Flange Nut	3
25	Flat Washer 8	8	54	On/Off Switch	1
26	Spring Washer 8	8	55	Flameout Wire	1
27	Flat Washer 5	4	56	Nut M6	2
28	Spring Washer 5	4	57	Muffler Cover	1
29	Outer Hex Bolt M5x20	4	58	Hex Flange Bolt M6x12	2